


# SWELLTITE NOTES

BLOCK WALLS MUST BE FILLED  
PRIOR TO MEMBRANE APPLICATION


IF BACKFILL CANNOT BE APPLIED IMMEDIATELY, PROTECT  
MEMBRANE EDGES FROM PRECIPITATION WITH ALLCO SEAMTAPE.  
IF BACKFILL CONTAINS SHARP OR IRREGULAR MATERIAL, COVER  
MEMBRANE WITH ALLCO APPROVED PROTECTION MATERIAL  
COURSE TO AVOID DAMAGE DURING BACKFILLING AND  
COMPACTION.

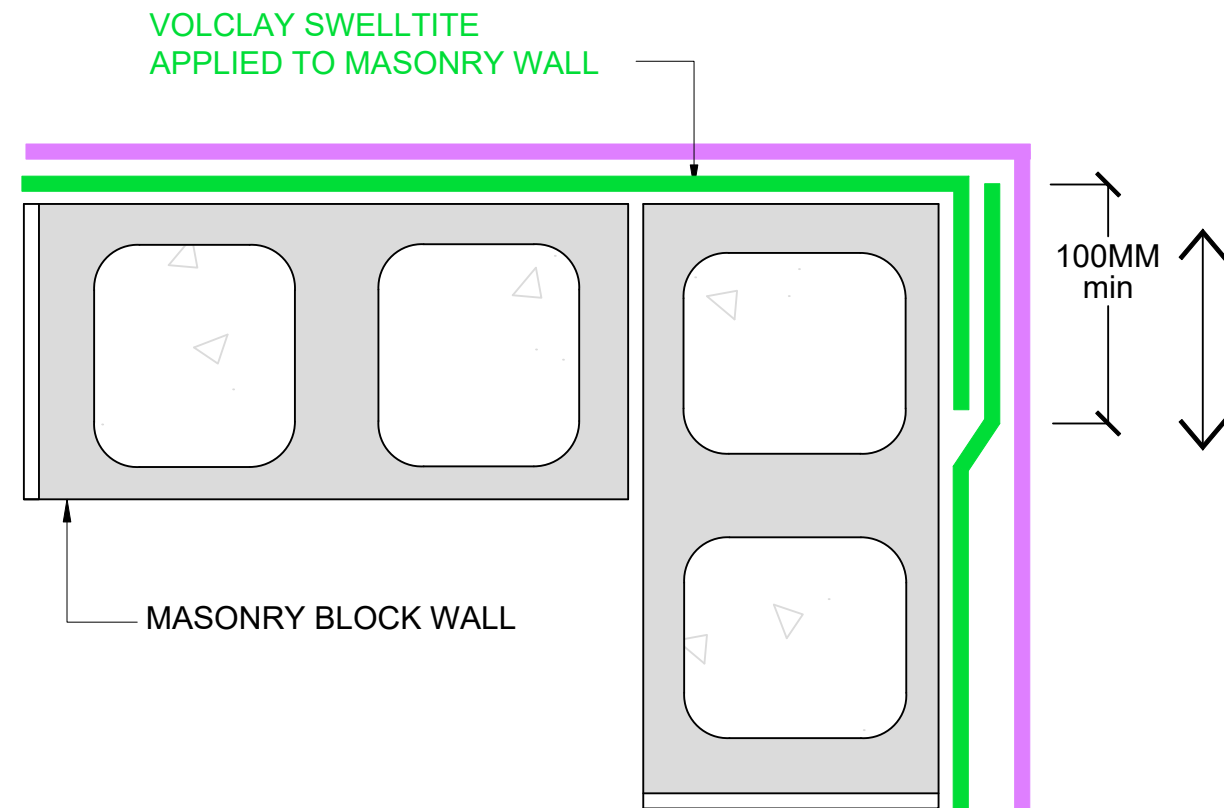

1

MASONRY WALL - EXTERNAL CORNER

SCALE: NTS

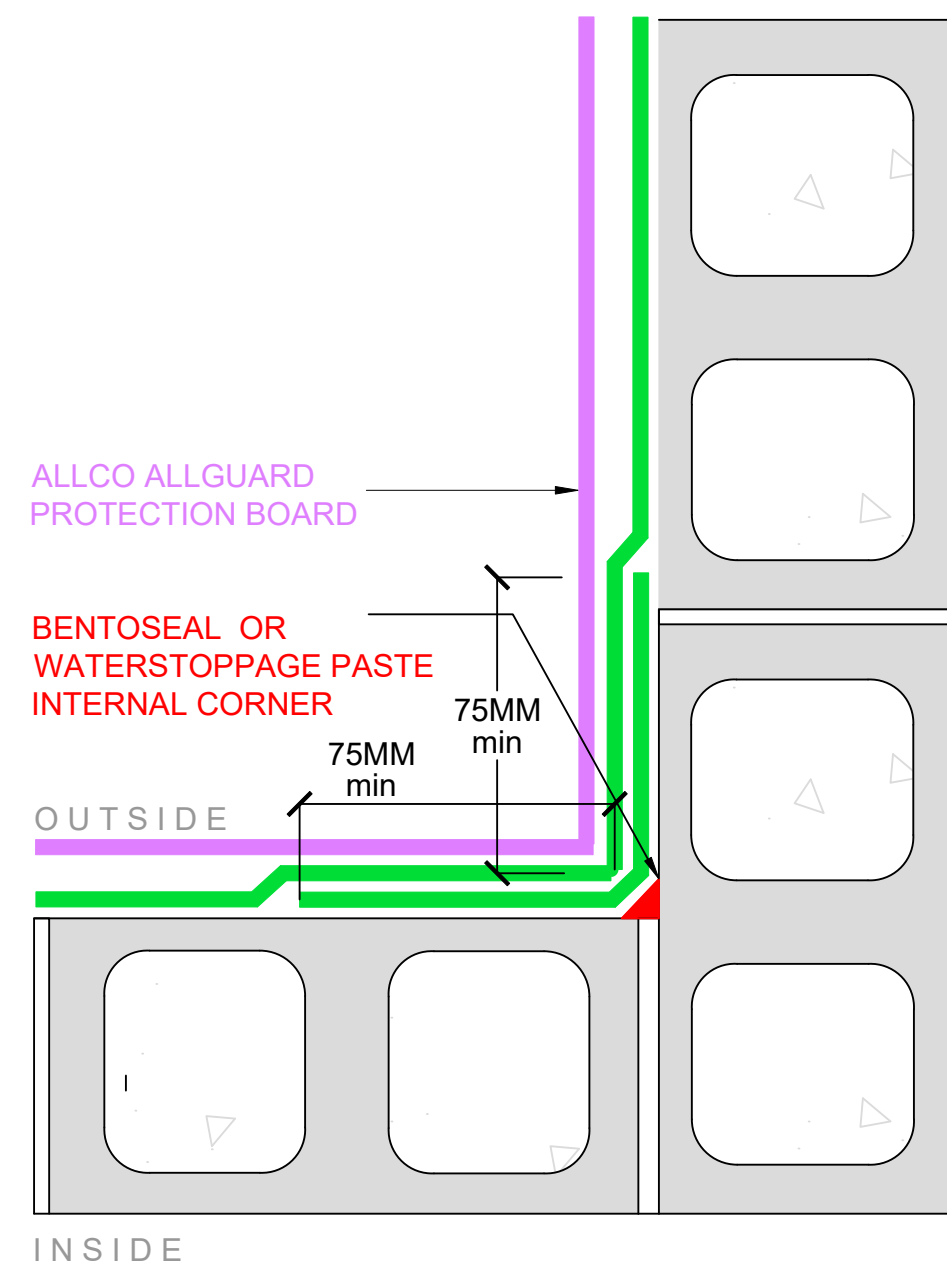

REFER V-W-03 FOR CONTROL JOINT DETAIL

2

MASONRY WALL - INTERNAL CORNER

SCALE: NTS



The information and data contained herein are believed to be accurate and reliable.  
This information does not constitute a warranty and should be used in conjunction with the  
project specification document supplied by Allco Waterproofing Solutions Ltd  
Please contact Allco Waterproofing Solutions Ltd with any questions or deviations from  
this information.  
© Allco Waterproofing Solution Ltd

For Technical Advice Contact:  
Web: [www.allco.co.nz](http://www.allco.co.nz)  
Email: [info@allco.co.nz](mailto:info@allco.co.nz)  
Telephone: 09 448 1185  
Facsimile: 09 448 1186



DRAWN BY:  
ALLCO

DATE:  
06/23

DRAWING REF:  
V-W-03A

REV:  
3